


<b>TABLE OF CONTENTS</b>	<b>GB</b>
--------------------------	-----------

<b>DESCRIPTION OF THE DRYER</b>	<b>PAGE 14</b>
<b>FILTER</b>	<b>PAGE 14</b>
<b>WATER CONTAINER</b>	<b>PAGE 15</b>
<b>BEFORE USING THE DRYER</b>	<b>PAGE 15</b>
<b>PRECAUTIONS</b>	<b>PAGE 15</b>
<b>PREPARING THE LAUNDRY</b>	<b>PAGE 16</b>
<b>SELECTING DRYING TIME OR PROGRAMME AND OPTIONS</b>	<b>PAGE 17</b>
<b>STARTING AND COMPLETING THE PROGRAMME</b>	<b>PAGE 18</b>
<b>INSTALLATION</b>	<b>PAGE 19</b>
<b>ELECTRICAL CONNECTION</b>	<b>PAGE 19</b>
<b>DRAINAGE SYSTEM</b>	<b>PAGE 21</b>
<b>DOOR REVERSIBILITY</b>	<b>PAGE 21</b>
<b>MAINTENANCE</b>	<b>PAGE 22</b>
<b>TROUBLE SHOOTING GUIDE</b>	<b>PAGE 23</b>
<b>AFTER-SALES SERVICE</b>	<b>PAGE 23</b>

To get full satisfaction from your dryer, please read carefully your instruction manual.

## DESCRIPTION OF THE DRYER

1. **Work-top**
2. **Condensation water container**
3. **Contact pin**
4. **Door (Door opening can be reversed).**  
See "Door reversibility" section.  
To open the door: pull the handle out.  
To close the door: push the door gently until it closes.
5. **Lint filter**
6. **Child safety-lock**
- 6a. **For dryers with clear door**  
Using a coin or a screwdriver turn the plastic screw counterclockwise until it snaps in.  
The door cannot be closed.
- 6b. **For dryers with non-clear door**  
Using a coin or a screwdriver turn the plastic screw clockwise by 90°.  
Slot vertical: the door cannot be closed.  
Slot horizontal: the door can be closed.
7. **Inside lamp (if available)**  
Only comes on when the door is open (the programme has to be selected), or the option "light" is selected.  
Light off: the programme selector knob is set to "0".  
After starting the inside lamp will remain lit for 30 seconds.
8. **Push-button for heat exchanger flap opening.**
9. **Heat exchanger.**

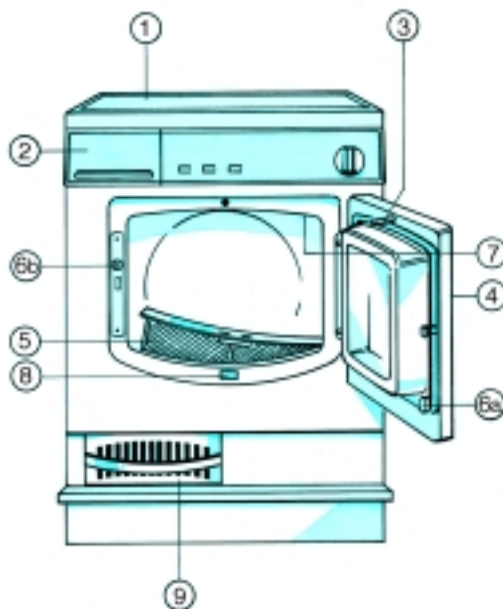

## FILTER

### Clean the lint filter at the end of each drying cycle.

1. Pull the filter upwards.
2. Open the filter.
3. Brush lint using a soft brush or your fingertips.
4. Close the filter and push it back well into place.

### Filter Indicator light

It warns that the filter is dirty and needs to be cleaned.

If the laundry is insufficiently dry, check that the filter is not clogged.

## WATER CONTAINER

### Empty the water container at the end of each drying cycle

1. Open the flap (pulling it gently to the left) and remove the water container.
2. Empty the container.
3. When emptied, push container back into housing until it clicks.

### Water container indicator light

Indicates that the water container is full and needs to be emptied. The drying programme is automatically stopped.

### Electronic dryer

Set programme selector knob to "0", empty the water container and restart the programme.

### Time-steered dryer

Empty the water container. Turn the programme selector knob to the line on the left of the emptying symbol (☐) (**Start** button is pressed).

When the pump cycle has finished, turn the selector knob to the position where it was when the drying cycle was interrupted.

## BEFORE USING THE DRYER

- After unpacking please make sure that the dryer is undamaged. In case of doubt do not use the dryer but call a qualified technician or your retailer.
- Packaging material (plastic, etc.) must be kept out of the reach of children as it constitutes a potential risk.
- This dryer was designed for domestic use and must be used exclusively for drying laundry.

### Environmental hints

#### 1. Packaging material

The packaging material can be 100% recycled, as confirmed by the recycling symbol (♻).

#### 2. Dryer

The dryer is built from recyclable materials. If you decide to scrap the dryer act responsibly and observe local waste disposal by laws. Cut off the power cord so that the dryer cannot be connected to the mains.



## PRECAUTIONS

### Child safety

- After use, set the programme selector to position "0". This prevents children from switching on the dryer accidentally.

### For domestic use only

This dryer conforms to EEC directive 93/68

## PREPARING THE LAUNDRY

### Laundry preparation

Check that all fastenings are closed and that pockets are empty. Turn the articles inside out. Place laundry loosely in the drum to make sure that they don't get tangled.

### Max. drying weight

- Cottons 5,0 kg
- Cottons with Rapid option 3,5 kg (electronic dryer)
- Synthetics 2,5 kg
- Delicates 1,5 kg (electronic dryer)

The given weights correspond to a standard laundry load.

### Sort laundry as follows

#### A) By care symbols

On the collar or inside seam:



Suitable for tumble drying



Tumble drying at low temperature only



Do not tumble dry

#### B) By amount and weight

Whenever the load is bigger than the dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

#### C) By type of fabrics

**Cottons/linen:** Towels, cotton jersey, bed and table linen made of cotton or linen.

**Synthetics:** Blouses, shirts, overalls, etc. made of polyester or polyamide, as well as for cotton/synthetic mixes.

**Delicates:** Sensitive fabrics for example viscose.

#### D) By drying level

- Sort into: iron dry, cupboard dry, etc.

### Do not tumble dry:

Woolens, silk, delicate fabrics, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

**Attention: Do not dry articles which have been treated with a dry cleaning fluid or rubber articles (danger of fire or explosion). Do not dry laundry dirty with vegetable oils.**



## SELECTING DRYING TIME OR PROGRAMME AND OPTIONS

### Electronic dryer

1. Select the programme and the options as indicated in the table (see Programme Table).

#### 2. Options (If available)

To select an option, press the corresponding button before pressing the **Start** button. The indicator above the button lights up to confirm that a selection has been made. An alarm sounds to indicate that an incorrect selection has been made (incompatible options). Press the button again to cancel the option.

##### **Delayed Start**

Delays dryer starting. Every time the push button is pressed the start is delayed by 1 hour. Can be set to a max. of 9 hours. When the required delay time has been set press the **Start** button. If the dot in the display flashes the Delayed Start is running. The count down is displayed. The delay can be changed or cancelled by selecting "0" with the programme selector knob. Opening the door stops the count-down. Close the door and press the **Start** button again to continue the count-down.

Anti-crease option can be selected during the count-down. The drum will turn from time to time during the count-down to redistribute the laundry. You may hear the pump for a short time after pressing the **Start** button.

##### **Gentle**

Reduces the drying temperature for delicate articles. It is automatically included in the delicate programme, therefore selection is not possible.

##### **Plus**

Lengthens the drying time for heavy laundry.

##### **Rapid (Cottons only) Max. 3,5 kg.**

Shortens the drying time (e.g. cloths or other laundry of equal size). Do not use the option for large items (e.g. sheets or similar).

##### **Buzzer**

Pressing the button initiates a buzzer sound to signal at regular intervals, at the end of the drying cycle.



##### **Anti-crease protection**

If you have pressed this button and do not take the laundry out of the drum at the end of the drying cycle, an anti-crease cycle operates: the drum turns at regular intervals for 12 hours preventing the laundry from becoming wrinkled. If the option is selected with "Delayed Start" the cycle operates both before and after the drying cycle.

**N.B.** If you do not press this button the anti-crease cycle is reduced to 70 minutes. If the buzzer is selected it will give an acoustic signal at regular intervals to remind to take out the laundry.

##### **Light**

On pressing this button an inside lamp comes on and lights the drum for 30 seconds with the door closed.

##### **Programme Sequence Indication**

When the drying cycle has been started the indicator lights show the "cycle status".

#### 3. Additional Programmes

##### **Airing**




The laundry will be aired during 30 minutes without heating.


##### **Time programme (20 to 60 minutes)**

To gently finish dry or dry single items. Suitable for all fabrics.


## SELECTING DRYING TIME OR PROGRAMME AND OPTIONS

### Time-steered dryer


1. Select the drying time and the options according to the table (see Programme Table).
2. **Options (if available)**  
To select an option, press the corresponding button. Press the button again to cancel the option.
  -  **Gentle**  
Reduces the drying temperature.  
Suitable for delicate articles.
  -  **Buzzer**  
Pressing the button initiates a buzzer sound to signal at regular intervals, at the end of the drying cycle.
3. **Additional Programme**
  -  **Airing**  
The laundry will be aired during 20 minutes without heating.

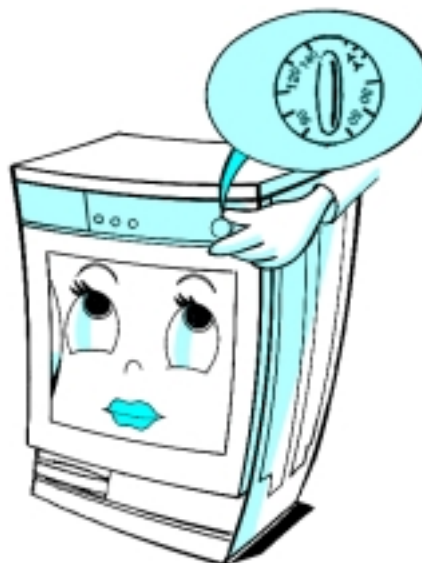

## STARTING AND COMPLETING THE PROGRAMME

1. Having selected the desired drying time or programme and options, press the **Start** button.
2. If selected a buzzer sounds to signal the end of the drying cycle. It will sound at regular intervals for some time.
3. If you do not unload the laundry at the end of the drying cycle, an automatic anti-crease cycle () will operate for maximum 20 min. (Time-steered dryer) or 70 min. (Electronic dryer): the drum rotates at regular intervals preventing the laundry from creasing.
4. On completion of the programme, set the programme selector knob to position "0". The "Machine On" light goes off.
5. **Clean the lint filter and empty the water container at the end of each drying cycle.**
6. If you change the programme (electronic dryer) during the drying cycle the dryer stops. To operate the new programme press the **Start** button again.

### Interruption of the drying cycle

To interrupt the dryer during the drying cycle, set the programme selector knob to position () Airing and press the **Start** button again for the Electronic dryer.

Wait at least 5 minutes before opening the door to allow the dryer to cool down.

For your safety the programme stops automatically if you open the door. To restart close the door and press the **Start** button again.

## INSTALLATION

- Install your dryer in a room which is not subject to extreme conditions.
- Remove the protective foil from the control panel.
- Level the dryer adjusting the four feet.
- Should the room temperature rise above 35°C during the operation of the dryer, please ventilate the room.
- Before running the first cycle ensure water container and heat exchanger are correctly positioned.
- If possible use the pipe supplied to drain the water directly to a drainage system (see chapter drainage system).
- Take care not to trap the mains cable between the dryer and the wall.

### Stacking kit

Your dryer can be stacked on top of your washing machine, using the stacking kit AMH 542, which is available from your dealer.

### Minimum housing dimensions:

Width: 600 mm

Height: 850 mm

Depth: 600 mm



## ELECTRICAL CONNECTION

- The electrical connection has to be carried out in compliance with local regulations.
- Information on the permissible operating voltage, the power consumption and the required fuse protection is given on the rating plate on the back of the dryer.
- The earthing of this dryer is compulsory by law.
- Do not use extension cords or multiple adapters.
- Before any maintenance on the dryer, disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact a qualified service technician.
- In case of replacement of mains cable contact a qualified service technician.





## ELECTRICAL CONNECTION

### 1) ELECTRICAL CONNECTIONS

#### **“Warning - this appliance must be earthed”**

This appliance is normally supplied with a mains lead having a plug fitted in the factory which has been checked for correct earth continuity.

If the fitted plug is not suitable for your socket outlet, or if the machine's mains lead is not fitted with a plug, you should fit a suitable new, good quality plug by following the instructions in (2) below.

Any unsuitable plug should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a socket.

### 2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician

The wires in the mains lead are coloured in accordance with the following code:


**BLUE - “NEUTRAL” (“N”)**


**BROWN - “LIVE” (“L”)**

**GREEN AND YELLOW - “EARTH” (“E”)**

To fit a new plug, proceed as follows:

#### 2.1 Polarized Plugs (e.g. 3 pin, 13 amp plug conforming to BS 1363A)

- a. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter “E” or by the Earth symbol  or coloured yellow or green and yellow.
- b. The BLUE wire must be connected to the terminal which is marked with the letter “N” or coloured black.
- c. The BROWN wire must be connected to the terminal which is marked with the letter “L” or coloured red.

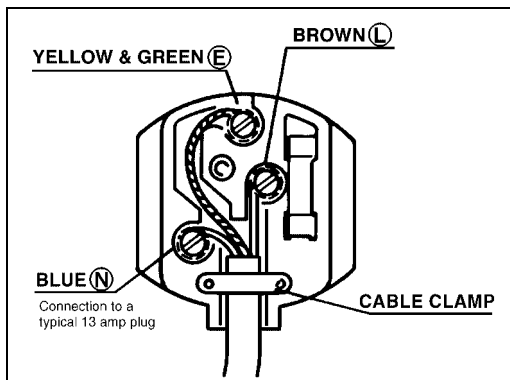


#### 2.2 Non-polarized plugs (e.g. 2 pin with side earth contact)

The wire which is coloured GREEN AND YELLOW must be connected to the earth contact. The other two wires should be connected to the two pins, irrespective of colour.

### 3) FUSE REPLACEMENT

If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, replace the fuse only with an A.S.T.A. approved type conforming to BS 1362 and proceed as follows:

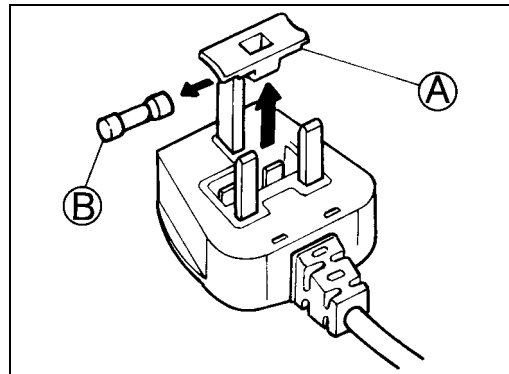

1. Remove the fuse cover (A) and the fuse (B).
2. Fit the replacement 13 A fuse into the fuse cover.
3. Refit both into the plug.

For all other types of plug, the supply socket should be protected by a 16 A fuse or circuit breaker at the distribution board.




## DRAINAGE SYSTEM

### Direct drainage at the rear of the dryer

**To avoid to empty the water container at the end of each drying cycle, connect the pipe supplied in the dryer directly to a fixed drain or put it into a sink.**


1. Remove the pipe in the lower part behind the dryer and mount it to the plastic connector (shown in diagram), put a rag underneath to collect water spillage.
2. Connect the pipe supplied with the dryer to the connector. The maximum drain height is 1m.
3. Make sure that the pipe is not bent or twisted (the end of the pipe must not be immersed in the drain water to avoid risk of siphoning). The supplied hose length is 1,5 m. The maximum permitted length is 2,5 m.

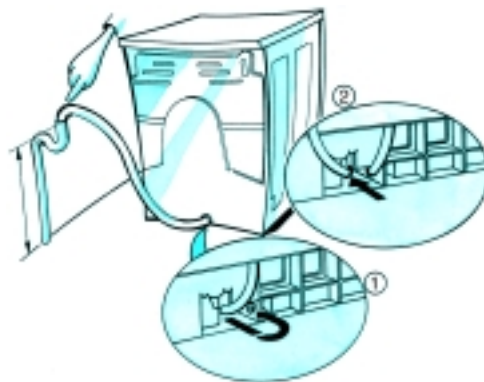

## DOOR REVERSIBILITY

### To change the direction of opening of the clear door


1. Unplug the dryer.
2. Open the door.
3. Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out.
4. Unscrew the 2 screws at the door hinge and remove the door.
5. Unscrew the 2 screws above and below the door lock system and remove the plate.
6. To remove the door lock:
  - Press the hook at the upper part down with a screwdriver, pull it forward and take the lock system out.
7. To change the door opening:
  - Turn the door.
  - Re-fit the door with the 2 screws at the preferred position.
  - Hang the door lock system at the opposite side of the door and latch it.
  - Fix the plate with the 2 screws above and below the door lock system.
  - Take care not to reverse the sense of the plate. The door lock should be free to move.
8. Replace the contact pin in the top of the door.

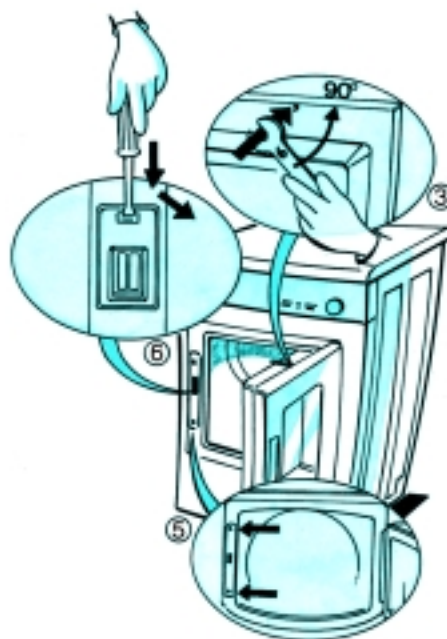

## DOOR REVERSIBILITY

### To change the direction of opening of the non-clear door

1. Unplug the dryer.
2. Open the door.
3. Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out.
4. Unscrew the 2 screws at the door hinge and remove the door.
5. To remove the door lock:
  - Unscrew the two screws above and below the door lock system and slide it upwards (1,5 cm) holding it from the bottom. Remove it.
6. To change the door opening:
  - Turn the door.
  - Re-fit the door with the 2 screws at the preferred position.
  - Insert the door lock system at the opposite side of the door and move it (1,5 cm) down.
  - Fix the 2 screws above and below the door lock system.
  - Take care not to reverse the sense of the door lock system. The child safety must be above the locking mechanism.
7. Replace the contact pin in the top of the door.

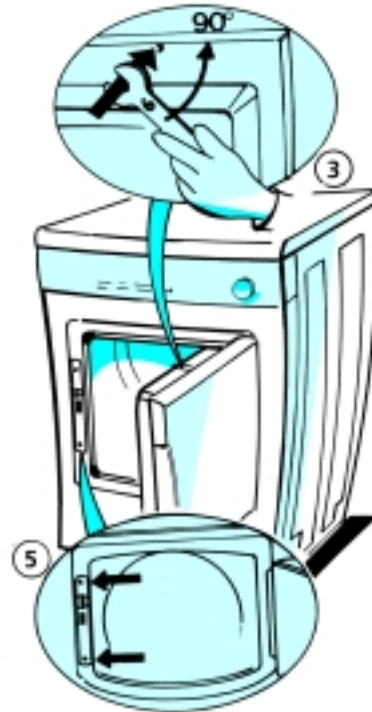

## MAINTENANCE

1. Wipe the cabinet with a mild household detergent. Avoid using abrasive cleaners.
2. Clean the lint filter at the end of each drying cycle.
3. If the lint filter mesh is clogged, clean it with water and a soft brush.
4. Clean the heat exchanger at least every three months proceeding as follows:
  - Open the door and press the button on the bottom of the door entrance.
  - The heat exchanger flap opens.
  - Rotate the retaining springs and extract the heat exchanger.
  - Wipe away fluff from the seal and housing using a damp cloth.
  - Flush the heat exchanger under running water.
  - To replace the heat exchanger, insert it into its bay and lock it in place with the retaining springs.



**N.B.** The heat exchanger plates may discolour with use.

5. Wipe away fluff from the door seal and the inside of the door using damp cloth.

## TROUBLE SHOOTING GUIDE

**Should your dryer operate incorrectly, check the following points before calling for a qualified service technician.**

### **Drying is too long / laundry is not dry enough:**

- Have you selected the correct drying time or programme ?
- Was the inserted laundry too humid (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator light on)?
- Is the heat exchanger dirty?
- Is the ambient temperature too high?
- After interruption of the mains supply, you must restart the dryer (Electronic dryer).

### **The dryer does not operate:**

- Is the plug properly connected to the mains supply?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the drying time or programme been selected?
- Has the **Start** button been pressed?

### **Lint filter or water container light on:**

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean?
- Has the pump position (Time-steered dryer) been selected (See "Water container" section)?

### **Waterdrops underneath the dryer:**

- Is the heat exchanger correctly positioned?
- Has the fluff on the sealing of the heat exchanger been wiped away?
- Has the fluff on the door seal been wiped away?

### **Replacing inside light bulb (if available):**

- If the inside lamp does not work, the bulb may perhaps be faulty.
- **Unplug the dryer !**
- Open the door and unscrew glass cover inside the drum.
- Replace faulty bulb with a new one and screw glass cover back on.
- Replacement bulb: 15W, 220/240 V, E14, suitable up to 300°C.

## AFTER-SALES SERVICE

### **Before contacting After-Sales Service**

1. Try to solve the problem (see "Trouble-shooting guide").
2. Restart the programme to see if the fault is repeated.

**If after the above checks your dryer does not work properly, get in touch with the nearest After-Sales Service Centre.**

### **Please give:**

- a short description of the fault.
- the exact type and model of the dryer.
- the service number visible on the right when door is open.
- Your correct address and telephone number.



**SERVICE** 0000 000 00000

